

Soft Absorber

FA-0806 Series



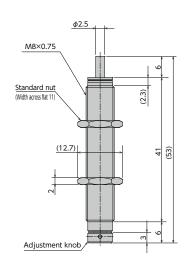

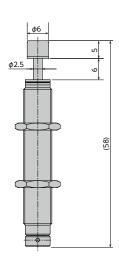

Specifications

Model	Stroke mm	Max. absorption energy J(kgf·m)	Max. equivalent mass kg (kgf)	Range of impact rate m/s	Orifice type
FA-0806-S	6	1.4(0.14)	15(15)	0.22	Single orifice type
FA-0806-C	0	1.4(0.14)	15(15)	0.3~2	Single-orifice type

Note) To place an order without a cap, put -S at the end of the model number, and to place an order with a cap, put -C at the end of the model number.

Common Specifications

Max. drag	N(kgf)	670 (68.3)	Operating temperature	$^{\circ}$	-5~70
Max. cycle rate	cycle/min	45	Mass :S type	g	13.8
Max. absorption energy per minute	J/min(kgf·m/min)	36.7 (3.74)	:C type	g	14.1
Recovering power of the piston	rod N(kgf)	9 or lower (0.92)			

Absorption characteristics

Orifice type	Single-orifice type
Model number	FA-0806 Series
Application	For low to medium speed
Absorption characteristics	Resistance

Precautions for Use

- * Do not use this product without carefully reading the attached owner's manual.
- * We recommend that you use it with an external stopper (Stopper nut OP-020SB).
- * Ensure that sufficient mounting strength is secured for this product. (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalogue.)
- st Do not use this product in a vacuum or a location where it may come in contact with oil.
- * Ensure that an eccentric load is not applied to the soft absorber. (Allowable eccentric angle: within $\pm 2.5^{\circ}$)

Adjustment Method

- * To adjust, turn the adjustment knob.
- * Because the adjustment can be done in an analog manner, a value between two integers on the indicator can be set.
- * It does not have a lock screw for locking the adjusted setting.

RoHS Compliant


•Products specification might be changed without notice.


Optional Parts

Eccentric angle adaptor OP-010M8

Model OP-010MB

- Screw the eccentric angle adaptor into the main unit until the cap for the eccentric angle and the piston rod form a tight connection. While maintaining this position, fasten the main unit's nut until secured.
- Use the eccentric angle adaptor when the eccentric angle is 2.5° or larger.
- The main unit can also be used as a stopper.
- Use it with FA-0806-S.
- The maximum operating eccentric angle with an eccentric angle adaptor is $\pm 10^{\circ}$.
- The maximum inclination angle using an inclination angle adapter is $\pm 10^{\circ}$
- The caps and the guides for inclined use are not unbundled.

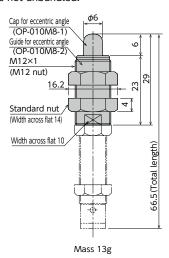

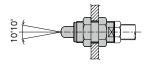


Note) Material of cap for eccentric angle: POM

Stopper nut OP-020SB

	Model
ſ	OP-020SB-S
	OP-020SB-C

• Adjust so that it stops 1mm before the stroke end, and fasten with the main unit's nut until secured.

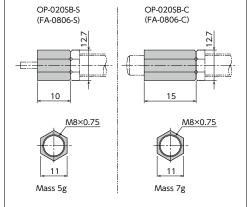


Note) When attaching, make sure that the side without a bearing chamfer is the impact surface.

Square flange OP-040SB

Model OP-040SB

• Once the attachment site is determined, use the main unit's nut to securely fasten

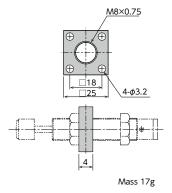

Standard nuts are sold separately as well.

Standard nats	are sola separat
Applicable Models	Model
FA-0806	M08 nut