Vane Damper

FYN-N2 Series





Specifications


Model	Max. torque	Reverse torque	Directions
FYN-N2-R103	1 N∙m (10kgf∙cm)	0.2 N•m or lower (2 kgf•cm or lower)	Clockwise (CW)
FYN-N2-L103			Counterclockwise (CCW)
FYN-N2-R203	2 N•m (20 kgf∙cm)	0.4 N•m or lower (4 kgf•cm or lower)	Clockwise (CW)
FYN-N2-L203			Counterclockwise (CCW)
FYN-N2-R303	3 N•m (30 kgf•cm)	0.8 N•m or lower (8 kgf•cm or lower)	Clockwise (CW)
FYN-N2-L303			Counterclockwise (CCW)

Polyamide (PA) Silicone oil

* Max. angle

110° * Operating temperature -5~50℃

- * Weight
- * Body and cap material
- 13 ±1g
- Polybutylene terephthalate (PBT)

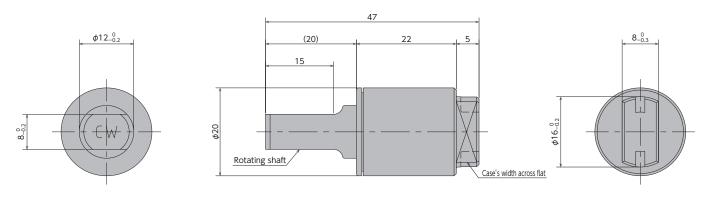


Note) Measured at 23°C±2°C


* Rotating shaft material

* Oil type

How to Use the Damper

1.FYN-N2 series has been designed so that when a lid is closing from a vertical position, as shown in Figure A, high torque is generated just before it closes completely. For a lid that closes from a horizontal position, as shown in Figure B, the strong torque generated just prior to a complete closure may prevent the lid from

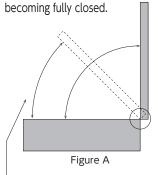

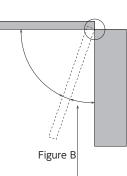


Stronger damper torque allows the lid to close gently until it is fully closed.

Stronger damper torque prevents the lid from being fully closed.


2. When using a damper with a lid shown in the diagram, determine the damper torque based on the following selection calculation.

Example) Lid weight M: 1.5 kg Lid dimension L: 0.4 m Gravity Center Position G: Assumed as $\frac{L}{2}$ Load torque: T = $1.5 \times 9.8 \times 0.4 \div 2$ =2.94N•m



Based on the above calculation, select FYN-N2-*303.


3. When connecting parts that are joined to the rotating shaft, ensure a snug fit. The lid will not decelerate as designed when closing if these parts are not connected properly. The dimensional tolerance for fixing the rotating shaft and body case is shown below.

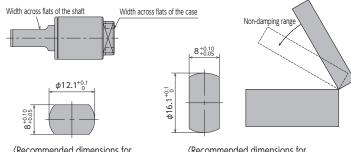


(Recommended dimensions for mounting the rotating shaft>

(Recommended dimensions for mounting the body case>


Products specification might be changed without notice.



This occurs because the viscosity of oil inside the damper is affected by the temperature change. Once the temperature returns to normal, so will the damper characteristics. Please refer to the right diagram for change in the action time for a free-closing lid.

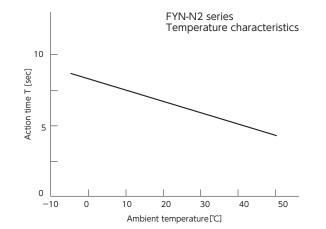

5. The damper action angle is 110° as shown below. Rotating it beyond this angle will cause the damper to break. Ensure that an external stopper is in place. The action angle is based on the width across flats of the case on the back of the body. The rotation end point is at 90° on the basis of the width across flats of the case. (Refer to the figure below.)

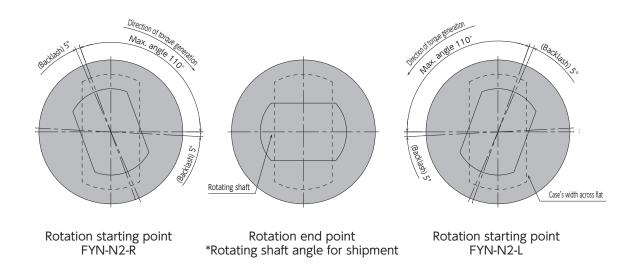

6. There are dampers that generate torque in either the clockwise or counterclockwise direction when the rotating shaft is seen from the above. Select a model according to use.